


# HOME DECORATORS COLLECTION

BF-24676 MSL GIFT-WRAP HUTCH 32"Hx42"W

INV#04643

## ASSEMBLY INSTRUCTIONS

Made In China

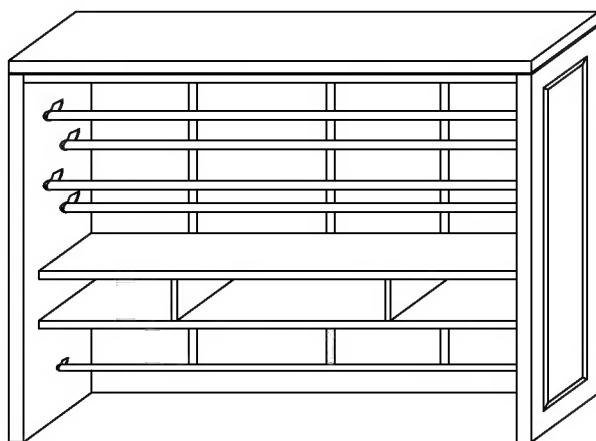


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment. Count all parts and material hardware, then compare with parts list to be sure all parts are present. If any parts are missing or damaged, phone, fax, or mail to our Customer Service Department for efficient and speedy service. Please indicate the model number and code letter of part(s) needed.

**IMPORTANT NOTE:** Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.


## PARTS LIST

**A**




TOP PANEL-1PC

**B**

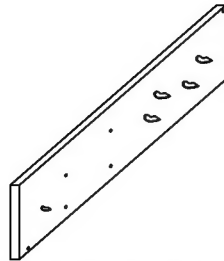

LEFT SIDE PANEL-1PC

**C**

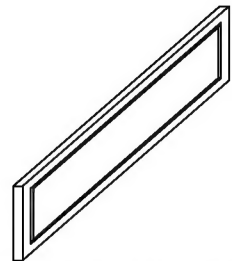


RIGHT SIDE PANEL-1PC

**D**




BACK PANELS-2PCS

**E**




BACK PANELS-2PCS

**F**

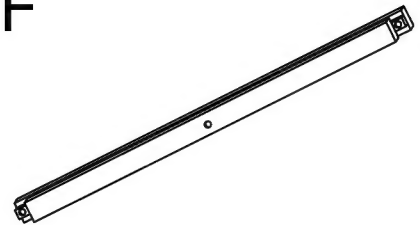


REAR PANEL GUIDES-3PCS

**G**




ADORNING PANEL-1PC

**H**




PANEL-1PC

**I**




ACROSS PANEL UP-1PC

**J**




ACROSS PANEL DOWN-1PC

**K**




STAND PANELS-2PCS


**L**

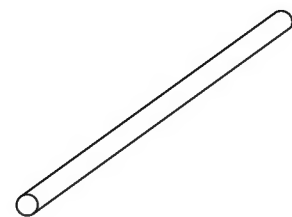

CIRCINAL IRON -1PC

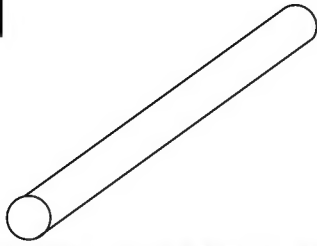**M**

CIRCINAL WOODENS-4PCS

**N**

CAM-BOLTS-24PCS

**O**

CAM-LOCKS-24PCS

**P**

8mm× 1"



SCREWS-3PCS

**Q**

6mm× 3/4"



SCREWS-9PCS

**R**

7mm× 5/8"



SCREWS-40PCS

**S**

CAM-TOOL-1PC

**T**

CAM-LOCK CAPS-16PCS

**U**

EVA MAT-4PCS

**V**

6mm× 1"



SCREWS-2PCS

**W**

HOOKS-2PCS

**X**

8mm× 1-1/4"



SCREWS-2PCS

**Y**

GECKOS-2PCS

**Z**



DOWELS-2PCS

**A1**

PLATES-2PCS




NOTE:THE SURFACE WITH THE STICKER IS THE BACK SIDE.

NOTE: • UPON OPENING, THOROUGHLY CLEAN ALL WOODS SURFACES TO REMOVE DUST AND DIRT THAT MAY HAVE SETTLED ONTO FINISH DURING SHIPMENT. IN ORDER TO PREVENT DAMAGE DURING ASSEMBLY, PLEASE ASSEMBLE THIS ITEM WITH AT LEAST TWO PEOPLE.

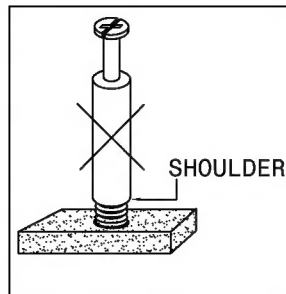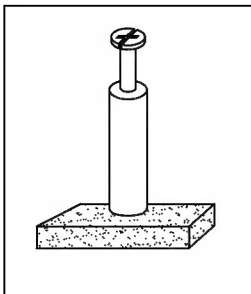


NOTE: TURN THE CAM-BOLT SCREWS UNTIL THEY ARE TIGHT, THE SHOULDER SHOULD BE AGAINST THE SURFACE OF THE PART.

## HOW TO USE THE CAM-TOOL

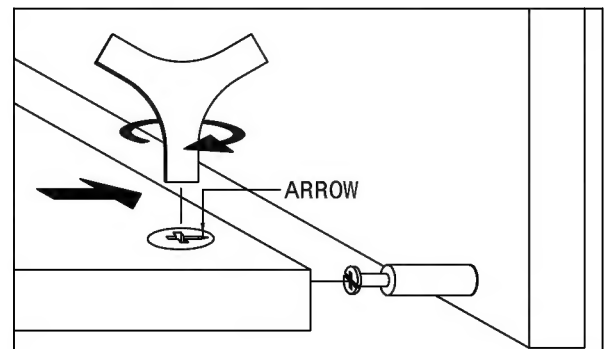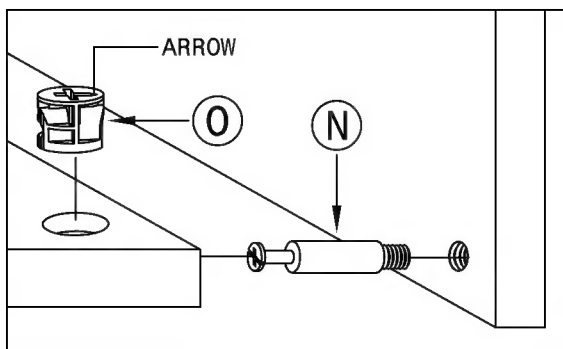


NOTE: • THE ARROWS ON THE HIDDEN CAM-LOCKS SHOULD POINT TO THE CAM-BOLTS

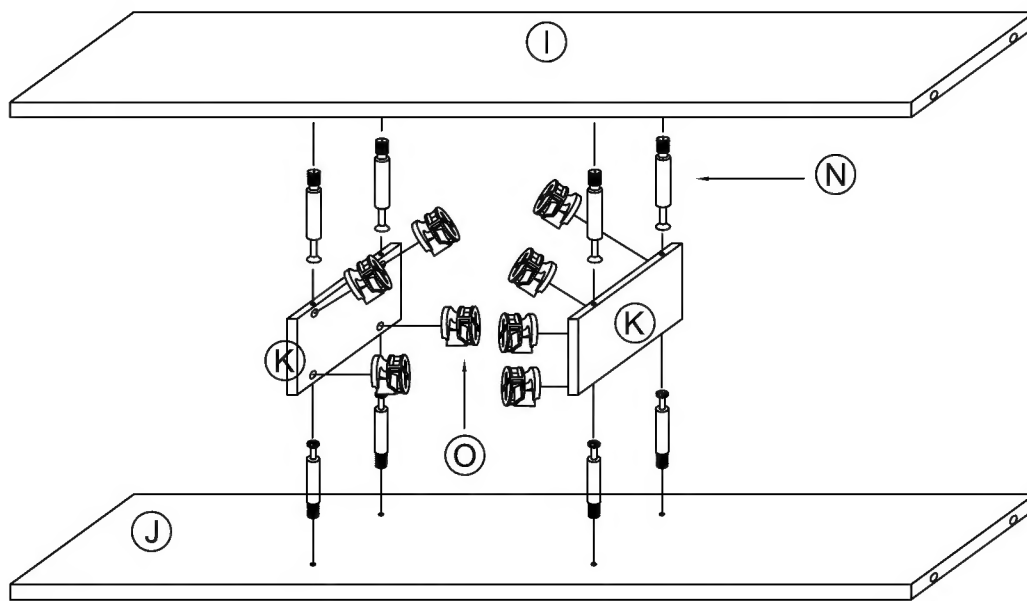


### 1) . ASSEMBLE THE ACROSS PANEL (I/J) .

- ROTATE THE 8 CAM-BOLTS(N) INTO THE HOLES IN THE ACROSS PANEL(I/J) .
- PLACE THE CAM-BOLTS(N) INTO THE HOLES IN THE SIDE PANELS(K) AND USING 8 CAM-LOCKS(O) .

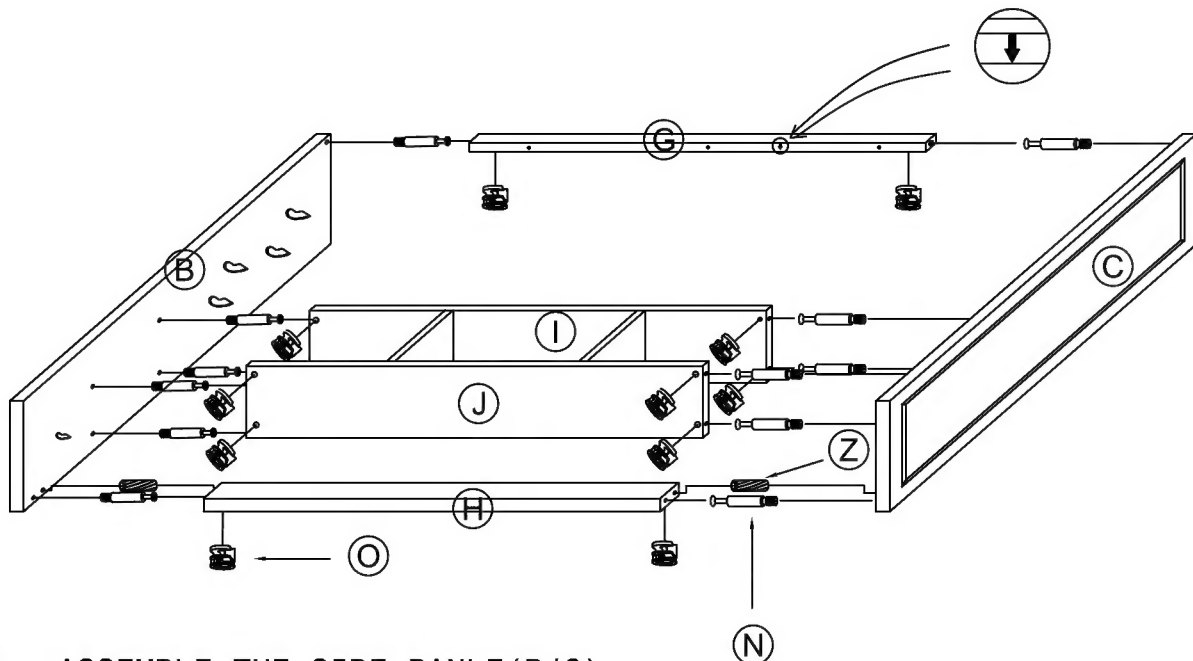


### 2) . ASSEMBLE THE SIDE PANLE(B/C) .

- ROTATE THE 12 CAM-BOLTS(N) AND INSERT THE 2 DOWELS(Z) INTO THE HOLES IN THE SIDE PANLE(B/C) .
- PLACE THE CAM-BOLTS(N) INTO THE HOLES IN THE PANELS(G/I/J/H) AND USING 12 CAM-LOCKS(O) .

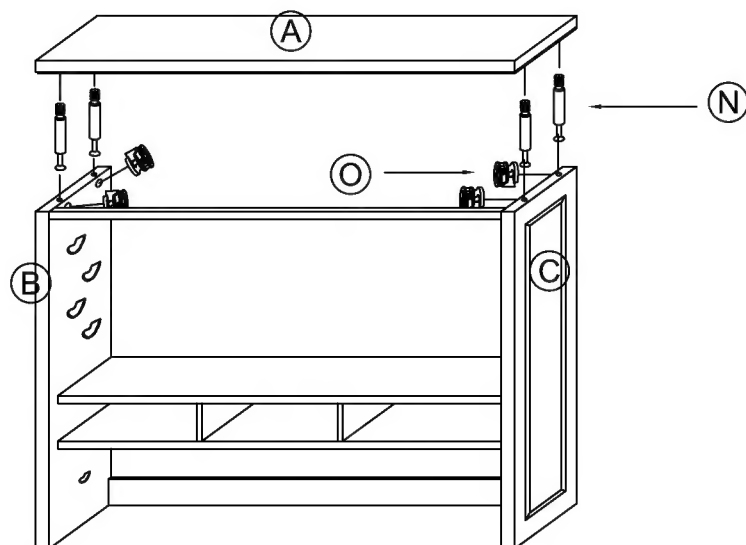


### 3) . ASSEMBLE THE TOP PANEL (A) .

- ROTATE THE 4 CAM-BOLTS(N) INTO THE HOLES IN THE TOP PANEL (A) .
- PLACE THE CAM-BOLTS(N) INTO THE HOLES IN THE SIDE PANEL (B/C) AND USING 4 CAM-LOCKS(O) .

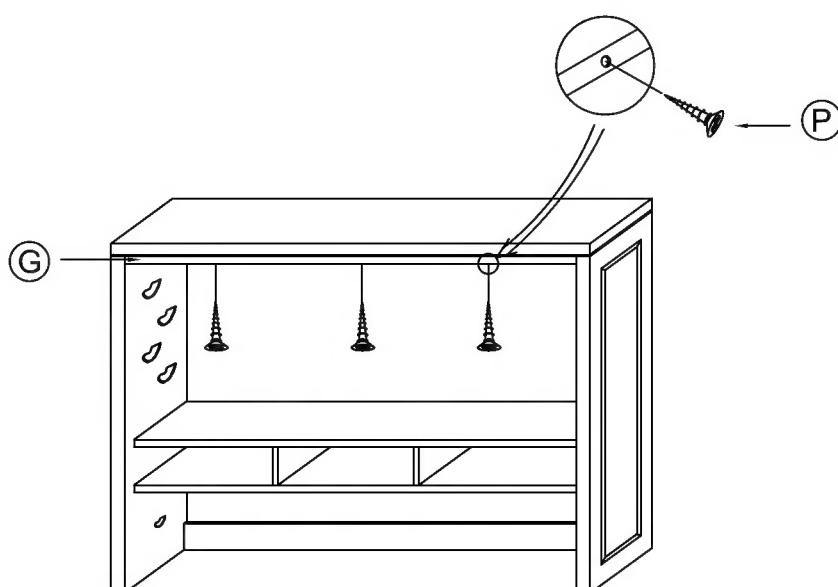


### 4) . ASSEMBLE THE SCREWS (P) .

- ROTATE THE 3 SCREWS(P) INTO THE HOLES IN THE ADORNING PANEL (G) .

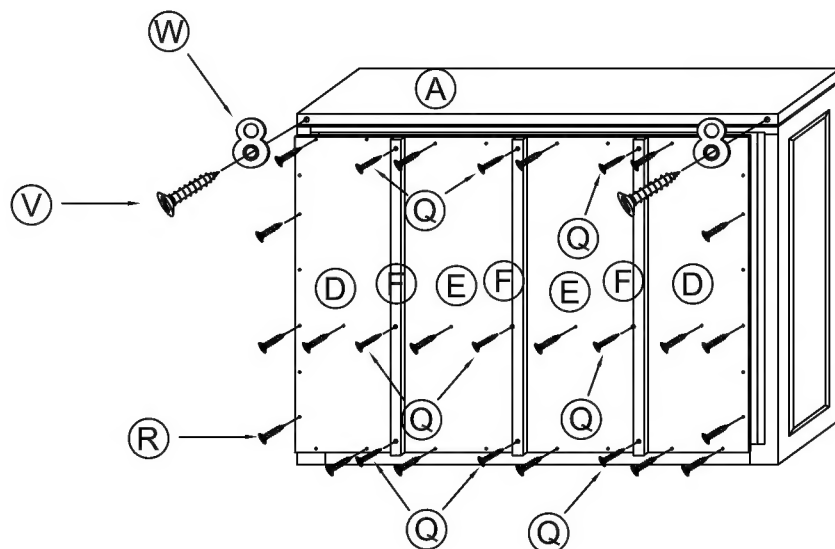


### 5) . ASSEMBLE BACK PANEL(D/E) .

- INSERT THE 4 BACK PANEL(D/E) INTO THE SLOTS IN THE REAR PANEL GUIDE(F) .
- ATTACH BACK PANEL(D/E) AND REAR PANEL GUIDE(F) USING 32 SCREWS(R) AND 9 SCREWS(Q) .
- ATTACH 2 HOOKS(W) USING 2 SCREWS(V) IN THE PREDRILLED HOLES OF REAR TOP PANEL(A) .

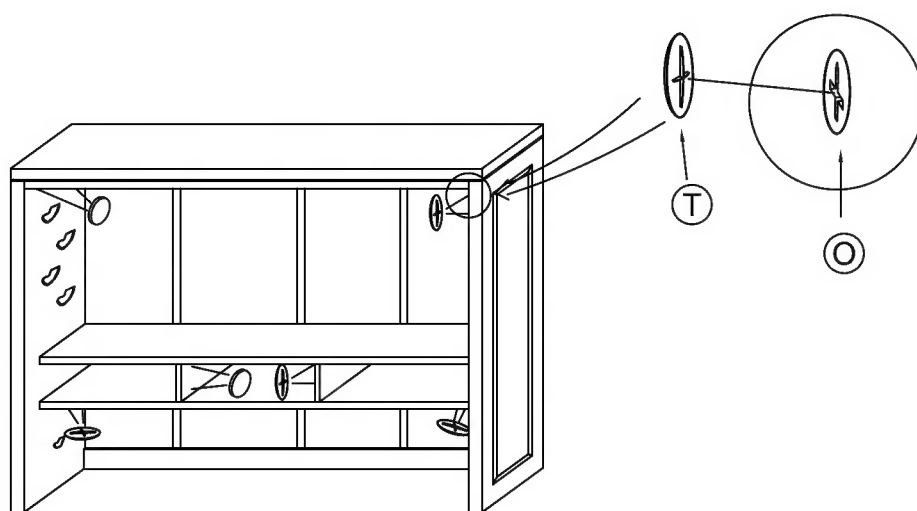


### 6) . ASSEMBLE CAM-LOCKS CAP(T) .

- ATTACH THE 16 CAM-LOCKS(O) USING 16 CAM-LOCK CAPS(T) .

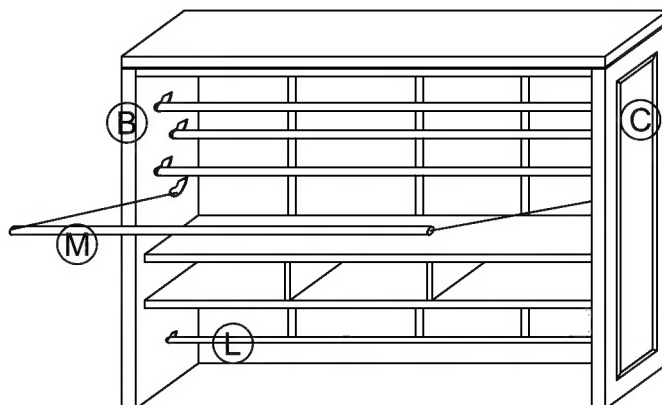

### 7) . ASSEMBLE CIRCINAL WOODEN/IRON(L/M) .


- INSERT THE 4 CIRCINAL WOODEN(M) AND CIRCINAL IRONS(L) INTO HOLES IN SIDE PANEL (B/C) .  
WHEN INSTALLED,PLS PUT THE CIRCINAL WOODEN/IRON(L/M) IN IT FROM THE RIGHT SIDE PANEL(C), THEN PUT IT INTO THE LEFT SIDE PANEL(B) .WHEN DISMANTLED,PLS REMOVE THE LEFT SIDE PANEL(B) .

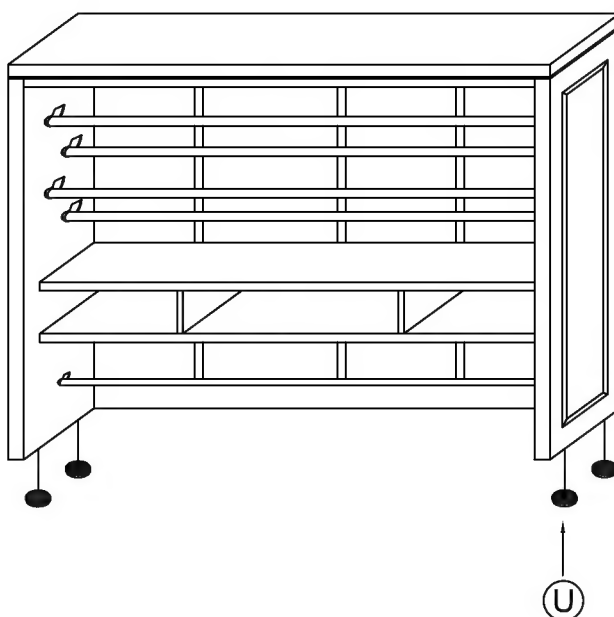

### 8) . ASSEMBLE THE EVA MAT(U) .


- ATTACH 4 EVA MATS(U) INTO THE SIDE PANEL(B/C) .



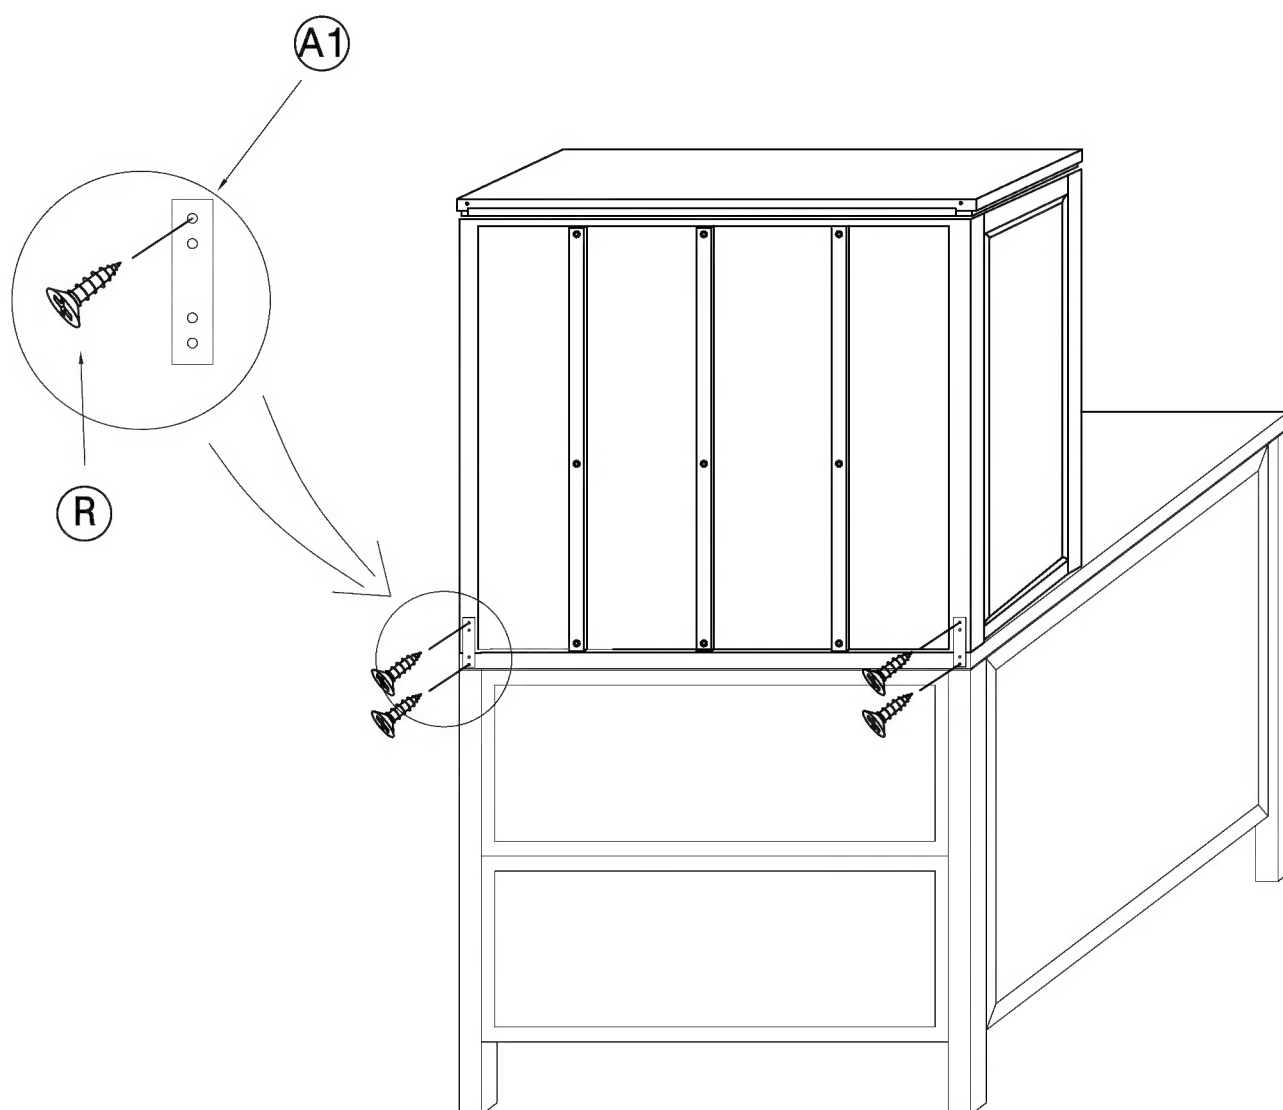

**9) .ASSEMBLE THE PLATE(A1) .**

- ATTACH THE PLATES(A1) TO SIDE PANEL(B/C) USING 8 SCREWS(R) .

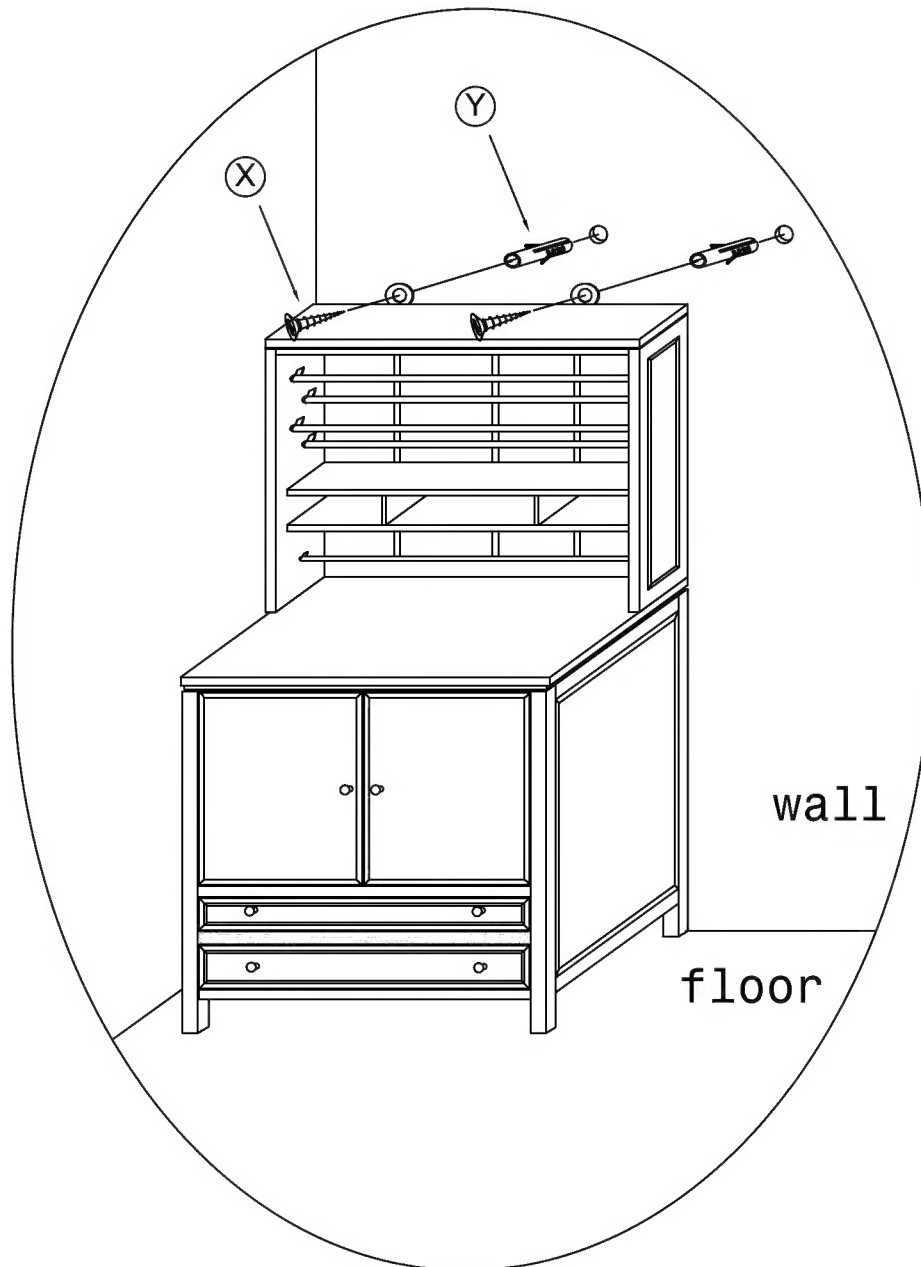

#### 10) .ASSEMBLE THE HANGER(Y) .

- DRILL TWO HOLES INTO WALL, PLEASE REFER TO TOP PANEL'S HOLE DISTANCE AND HEIGHT.
- PUT 2 GECKOS(Y) INTO THE HOLES IN THE WALL AND ROTATE 2 SCREWS(X) INTO THE GECKOS(Y) .